


INVERSOR DE GASOLINA
MODELO :- BON-P-GI-3.8KW

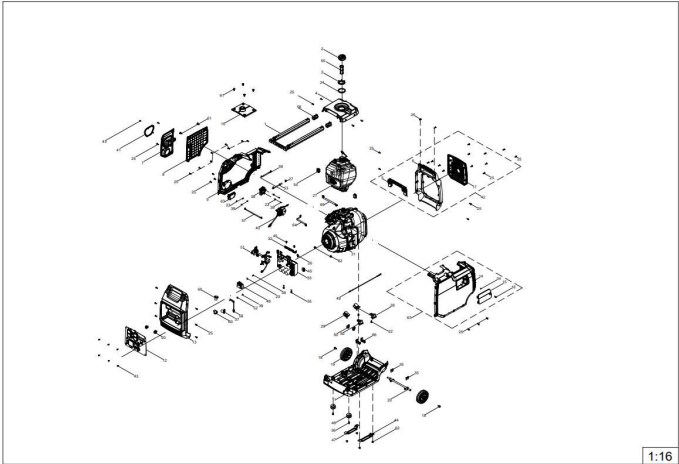

PARTES DEL CUERPO (BODY PARTS)			
IMAGEN	BOHNOEFFER CODIGO	DESCRIPCION EN ESPANOL	DESCRIPTION IN ENGLISH
1	BONGI3.8KW-B01	MANGO AJUSTABLE	ADJUSTABLE HANDLE
2	BONGI3.8KW-B02	TAPA DE COMBUSTIBLE	FUEL CAP
3	BONGI3.8KW-B03	TUERCA	NUT
4	BONGI3.8KW-B04	LA CUBIERTA SUPERIOR	TOP COVER
5	BONGI3.8KW-B05	CUBIERTA DE MANIJA	HANDLE COVER
6	BONGI3.8KW-B06	CUBIERTA TRASERA	REAR COVER (back cover combination)
7	BONGI3.8KW-B07	VENTANA DE SERVICIO, MANIJA DE ARRANQUE	SERVICE WINDOW ,STARTER HANDLE
8	BONGI3.8KW-B08	VENTANA DE SERVICIO, CONJUNTO DE FILTRO DE AIRE	SERVICE WINDOW ,AIR FILTER ASSEMBLY



9	BONGI3.8KW-B09	CASCO IZQUIERDO	LEFT HULL
10	BONGI3.8KW-B10	VENTANA DE SERVICIO	SERVICE WINDOW
11	BONGI3.8KW-B11	BASE DE LA CAJA DE INTERRUPTORES	SWITCH BOX BASE
12	BONGI3.8KW-B12	PANEL DE CONTROL	CONTROL PANEL (panel assembly)
13	BONGI3.8KW-B13	PORTADA	FRONT COVER
14	BONGI3.8KW-B14	CASCO DERECHO	RIGHT HULL
15	BONGI3.8KW-B15	TABLA DE TAPA DERECHA	RIGHT COVER BOARD
16	BONGI3.8KW-B16	PERNO PHILLIPS	PHILLIPS BOLT (anti-loosening screw (slotted))
17	BONGI3.8KW-B17	VENTANA DE SERVICIO,SILENCIADO R	SERVICE WINDOW,MUFFLER
18	BONGI3.8KW-B18	PERNO, M8×12	BOLT, M8×12
19	BONGI3.8KW-B19	RUEDA	WHEEL

20	BONGI3.8KW-B20	CONJUNTO DEL EJE DE LA RUEDA	WHEEL SHAFT ASSEMBLY
21	BONGI3.8KW-B21	DEPÓSITO DE COMBUSTIBLE	FUEL TANK
22	BONGI3.8KW-B22	PERNO, M8×25	BOLT, M8×25
23	BONGI3.8KW-B23	ARANDELA, Φ4	WASHER, Φ4 (large washer Φ4)
24	BONGI3.8KW-B24	ALMOHADILLA DE AMORTIGUACIÓN	DAMPING PAD (fuel tank shock absorbing rubber ring)
25	BONGI3.8KW-B25	TORNILLO	BOLT
26	BONGI3.8KW-B26	CLIP	CLIP (fixed line card)
27	BONGI3.8KW-B27	ABRAZADERA	CLAMP
28	BONGI3.8KW-B28	ALMOHADILLA DE AMORTIGUACIÓN	DAMPING PAD (vibration damping support three)
29	BONGI3.8KW-B29	ALMOHADILLA DE AMORTIGUACIÓN	DAMPING PAD (Vibration Absorbing Bearing 2)
30	BONGI3.8KW-B30	ALMOHADILLA DE AMORTIGUACIÓN	DAMPING PAD (vibration damping support one)


31	BONGI3.8KW-B31	MOTOR	ENGINE
32	BONGI3.8KW-B32	SOPORTE DE MONTAJE DEL INVERSOR	INVERTER MOUNTING BRACKET
33	BONGI3.8KW-B33	PLACA INVERSORA COMPLETA	INVERTER
34	BONGI3.8KW-B34	ANILLO DE RETENCIÓN, 4	RETAINING RING, 4
35	BONGI3.8KW-B35	PERNO, M6×22	BOLT, M6×22
36	BONGI3.8KW-B36	PERNO, M6×12	BOLT, M6×12
37	BONGI3.8KW-B37	CHAQUETA DE ALAMBRE	WIRE JACKET (outlet sheath 2 (φ21))
38	BONGI3.8KW-B38	BOMBA DE PULSO	PULSE PUMP
39	BONGI3.8KW-B39	TORNILLO AUTOROSCANTE ST3.5×13	SELF-TAPPLING SCREW, ST3.5×13
40	BONGI3.8KW-B40	TANQUE	TANK
41	BONGI3.8KW-B41	PROTECCIÓN, MANIJA DE ARRANQUE	SHIELD ,STARTER HANDLE

42	BONGI3.8KW-B42	CUBIERTA TRASERA	REAR COVER (back cover assembly)
43	BONGI3.8KW-B43	TORNILLO, M4×10	SCREW, M4×10
44	BONGI3.8KW-B44	SOPORTE DE CAJA INFERIOR	BOTTOM CASE BRACKET (base reinforcement plate 1)
45	BONGI3.8KW-B45	PERNO, M6×12	BOLT, M6×12 (large plate bolt)
46	BONGI3.8KW-B46	TAPA DE GOMA	RUBBER CAP
47	BONGI3.8KW-B47	SOPORTE DE CAJA INFERIOR	BOTTOM CASE BRACKET (base reinforcement plate 2)
48	BONGI3.8KW-B48	MÓDULO DE IGNICIÓN	IGNITION MODULE
49	BONGI3.8KW-B49	CABLE DE TIERRA	EARTH WIRE
50	BONGI3.8KW-B50	ACORTAR	CLIP (cable clip)
51	BONGI3.8KW-B51	PANEL DE CONTROL	CONTROL PANEL (wiring harness assembly)
52	BONGI3.8KW-B52	ARANDELA, Φ4	WASHER, Φ4 (flat washer φ4)

53	BONGI3.8KW-B53	MANGUERA DE COMBUSTIBLE	FUEL HOSE (oil switch oil inlet pipe)
54	BONGI3.8KW-B54	JUNTA, TANQUE DE COMBUSTIBLE	GASKET, FUEL TANK
55	BONGI3.8KW-B55	FILTRO DE COMBUSTIBLE	FUEL FILTER
56	BONGI3.8KW-B56	ENCHUFAR	PLUG
57	BONGI3.8KW-B57	MANGUERA DE COMBUSTIBLE	FUEL HOSE (gasoline pump oil inlet pipe)
58	BONGI3.8KW-B58	PLACA DE CIRCUITO	CIRCUIT BOARD
59	BONGI3.8KW-B59	MANGUERA DE COMBUSTIBLE	FUEL HOSE (gasoline pump oil outlet pipe)
60	BONGI3.8KW-B60	CHAQUETA DE ALAMBRE	WIRE JACKET (outlet sheath (notched))
61	BONGI3.8KW-B61	PERNO PHILLIPS	PHILLIPS BOLT (anti-loosening screw)
62	BONGI3.8KW-B62	TUERCA, M8	NUT, M8
63	BONGI3.8KW-B63	BOTE DE CARBONO	CARBON CANISTER

64	BONGI3.8KW-B64	MANGUERA DE COMBUSTIBLE	FUEL HOSE (carbon canister connecting pipe)
65	BONGI3.8KW-B65	MANGUERA DE COMBUSTIBLE	FUEL HOSE (dump valve connecting pipe 1)
66	BONGI3.8KW-B66	ACORTAR	CLIP (cable clamp)
67	BONGI3.8KW-B67	CONJUNTO DEL CASCO DERECHO	RIGHT HULL ASSEMBLY
TOTAL			

PIEZA DE LA MÁQUINA (ENGINE PARTS)			
S. NO	BOHNOEFFER CODIGO	DESCRIPCION EN ESPANOL	DESCRIPTION IN ENGLISH
1	BONGI3.8KW-E01	PERNO, M6×14	BOLT, M6×14
2	BONGI3.8KW-E02	PERNO, M6×85	BOLT, M6×85
3	BONGI3.8KW-E03	CONJUNTO DEL FILTRO DE AIRE	AIR FILTER ASSEMBLY
4	BONGI3.8KW-E04	TORNILLO	BOLT
5	BONGI3.8KW-E05	MANGUERA DE RESPIRADERO	BREATHER HOSE
6	BONGI3.8KW-E06	JUNTA, FILTRO DE AIRE	GASKET, AIR FILTER
7	BONGI3.8KW-E07	CARBURADOR	CARBURETOR
8	BONGI3.8KW-E08	JUNTA DE CARBURADOR	GASKET, CARBURETOR
9	BONGI3.8KW-E09	TORNILLO, M4×8	SCREW, M4×8
10	BONGI3.8KW-E10	MOTOR PASO A PASO	STEPPING MOTOR
11	BONGI3.8KW-E11	TORNILLO AUTOROSCANTE ST4.8×20	SELF-TAPPLING SCREW, ST4.8×20
12	BONGI3.8KW-E12	TORNILLO AUTOROSCANTE ST4.2×25	SELF-TAPPLING SCREW, ST4.2×25
13	BONGI3.8KW-E13	ACORTAR	CLIP

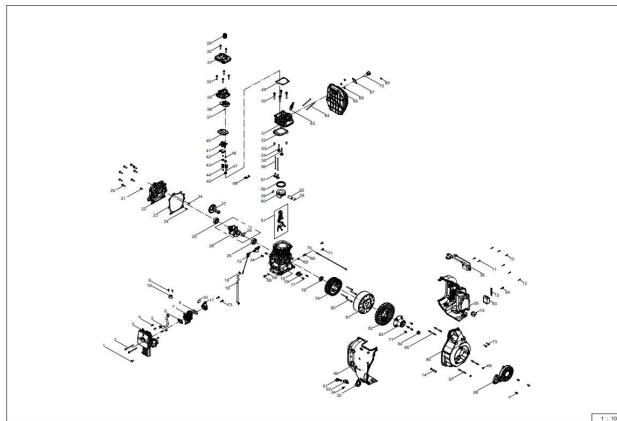

14	BONGI3.8KW-E14	ACORTAR	CLIP
15	BONGI3.8KW-E15	PARACHISPAS	SPARK ARRESTER
16	BONGI3.8KW-E16	JUNTA, COLECTOR DE ADMISION	GASKET, INTAKE MANIFOLD
17	BONGI3.8KW-E17	TUBO DE ENTRADA	INLET PIPE
18	BONGI3.8KW-E18	ABRAZADERA	CLAMP
19	BONGI3.8KW-E19	MANGUERA DE COMBUSTIBLE	FUEL HOSE
20	BONGI3.8KW-E20	PERNO, M8×30	BOLT, M8×30
21	BONGI3.8KW-E21	CASQUILLO, $\Phi 12 \times 16.8$ - $\Phi 8.5 \times \Phi 6.5$	BUSH, $\Phi 12 \times 16.8$ - $\Phi 8.5 \times \Phi 6.5$
22	BONGI3.8KW-E22	TAPA DEL CARTER	CRANKCASE COVER
23	BONGI3.8KW-E23	JUNTA, CARTER	GASKET, CRANKCASE
24	BONGI3.8KW-E24	PIN, $\Phi 8 \times 14$	PIN, $\Phi 8 \times 14$
25	BONGI3.8KW-E25	COJINETE, TM6205	BEARING, TM6205
26	BONGI3.8KW-E26	CIGÜEÑAL	CRANKSHAFT
27	BONGI3.8KW-E27	ÁRBOL DE LEVAS	CAMSHAFT
28	BONGI3.8KW-E28	LLAVE DE MADERA	WOODRUFF KEY

29	BONGI3.8KW-E29	AMORTIGUADOR, TAPA DE VALVULA	ABSORBER, VALVE COVER
30	BONGI3.8KW-E30	PERNO, M6×10	BOLT, M6×10
31	BONGI3.8KW-E31	TAPA DE LA VÁLVULA	VALVE COVER (cylinder head cover cover)
32	BONGI3.8KW-E32	JUNTA, VARILLA MEDIDA	GASKET, DIPSTICK
33	BONGI3.8KW-E33	PERNO, M6×25	BOLT, M6×25
34	BONGI3.8KW-E34	PERNO, M6×16	BOLT, M6×16
35	BONGI3.8KW-E35	TAPA DE LA VÁLVULA	VALVE COVER (cylinder head cover assembly)
36	BONGI3.8KW-E36	PLACA INTERIOR DE TAPA DE VÁLVULA	VALVE COVER INNER PLATE
37	BONGI3.8KW-E37	PERNO, M5×10	BOLT, M5×10
38	BONGI3.8KW-E38	BOBINA DE ENCENDIDO	IGNITION COIL
39	BONGI3.8KW-E39	CARCASA DEL VENTILADOR	BLOWER HOUSING (air guide right cover assembly)
40	BONGI3.8KW-E40	JUNTA, TAPA DE VÁLVULA	GASKET, VALVE COVER (cylinder head cover inner plate gasket)
41	BONGI3.8KW-E41	CONJUNTO DEL BRAZO BALANCÍN	ROCKER ARM ASSEMBLY
42	BONGI3.8KW-E42	BASE DEL BALANCÍN	ROCKER ARM BASE
43	BONGI3.8KW-E43	ASIENTO DE RESORTE DE VÁLVULA	VALVE SPRING SEAT

44	BONGI3.8KW-E44	RESORTE DE VÁLVULA	VALVE SPRING
45	BONGI3.8KW-E45	SELLO DE LA VÁLVULA DE ADMISIÓN	INTAKE VALVE SEAL
46	BONGI3.8KW-E46	TAPA DE AJUSTE DE VÁLVULA, ESCAPE	VALVE ADJUST CAP, EXHAUST
47	BONGI3.8KW-E47	BLOQUEO DE VÁLVULA	VALVE LOCKER
48	BONGI3.8KW-E48	BASE DE CLIP	CLIP BASE
49	BONGI3.8KW-E49	JUNTA, TAPA DE VÁLVULA	GASKET, VALVE COVER (cylinder head gasket)
50	BONGI3.8KW-E50	PERNO, M8×60	BOLT, M8×60
51	BONGI3.8KW-E51	CABEZA DE CILINDRO	CYLINDER HEAD
52	BONGI3.8KW-E52	CULATA JUNTA	GASKET, CYLINDER HEAD
53	BONGI3.8KW-E53	PIN, Φ10×16	PIN, Φ10×16
54	BONGI3.8KW-E54	VÁLVULA DE ESCAPE	EXHAUST VALVE
55	BONGI3.8KW-E55	VÁLVULA DE ADMISIÓN	INTAKE VAVLE
56	BONGI3.8KW-E56	VARILLA DE EMPUJE	PUSH ROD
57	BONGI3.8KW-E57	ALZAVÁLVULAS	TAPPET
58	BONGI3.8KW-E58	JUEGO DE AROS DE PISTÓN	PISTON RING SET

59	BONGI3.8KW-E59	CIRCUITO	CIRCLIP
60	BONGI3.8KW-E60	PISTÓN	PISTON
61	BONGI3.8KW-E61	CONJUNTO DE BIELA	CONNECTING ROD ASSEMBLY
62	BONGI3.8KW-E62	PASADOR DEL PISTÓN	PISTON PIN
63	BONGI3.8KW-E63	BUJÍA	SPARK PLUG
64	BONGI3.8KW-E64	SEMENTAL	STUD (double-headed stud (M6×92_open block 66_RoHS)
65	BONGI3.8KW-E65	SILENCIADOR	MUFFLER
66	BONGI3.8KW-E66	TUERCA, M6	NUT, M6
67	BONGI3.8KW-E67	JUNTA, SILENCIADOR	GASKET, MUFFLER
68	BONGI3.8KW-E68	PERNO DE TIERRA	EARTH BOLT
69	BONGI3.8KW-E69	ARANDELA, Φ10×1,5×Φ16	WASHER, Φ10×1.5×Φ16
70	BONGI3.8KW-E70	CABLE DE TIERRA	EARTH WIRE
71	BONGI3.8KW-E71	PERNO, M6×16	BOLT, M6×16
72	BONGI3.8KW-E72	SENSOR DE ACEITE	OIL SENSOR

73	BONGI3.8KW-E73	PERNO, M6×22	BOLT, M6×22
74	BONGI3.8KW-E74	JUNTA DE ALAMBRE	GASKET, WIRE
75	BONGI3.8KW-E75	CAJA DEL CIGÜEÑAL	CRANKCASE
76	BONGI3.8KW-E76	DESENCADENAR	TRIGGER
77	BONGI3.8KW-E77	PERNO, M6×12	BOLT, M6×12
78	BONGI3.8KW-E78	SELLO DE ACEITE, Φ25×Φ41.25×6	OIL SEAL, Φ25×Φ41.25×6
79	BONGI3.8KW-E79	CONJUNTO DEL ESTATOR	STATOR ASSEMBLY
80	BONGI3.8KW-E80	PERNO, M6×60	BOLT, M6×60
81	BONGI3.8KW-E81	ROTOR	ROTOR
82	BONGI3.8KW-E82	VENTILADOR	COOLING FAN
83	BONGI3.8KW-E83	COPA DE INICIO	STARTER CUP
84	BONGI3.8KW-E84	TUERCA, M14×1,5	NUT, M14×1.5
85	BONGI3.8KW-E85	SEMENTAL	STUD (stud bolt (M8×94.7_Open 42.7_RoHS))
86	BONGI3.8KW-E86	CARCASA DEL VENTILADOR	BLOWER HOUSING (Starter Fan Cover)

87	BONGI3.8KW-E87	SEMENTAL	STUD (double-headed stud (M6×92_open block 60.8)
88	BONGI3.8KW-E88	ARRANCADOR DE RETROCESO	RECOIL STARTER
89	BONGI3.8KW-E89	TORNILLO AUTOROSCANTE, ST4,2×9,5	SELF-TAPPLING SCREW, ST4.2×9.5
90	BONGI3.8KW-E90	CARCASA DEL VENTILADOR	BLOWER HOUSING (air guide left cover assembly)
91	BONGI3.8KW-E91	VARILLA GRADUADA	DIPSTICK
92	BONGI3.8KW-E92	CONJUNTO DEL ASIENTO DE LA VARILLA MEDIDORA	DIPSTICK SEAT ASSEMBLY
93	BONGI3.8KW-E93	RECTIFICADOR	RECTIFIER
94	BONGI3.8KW-E94	PERNO, M6×14	BOLT, M6×14 (large plate bolt)